

# RSS 1750

## RSS175024X24NE000


### 2-to-24 Substitution Switch (950-1750 MHz)

#### General Description:

The **RSS175024X24NE000** is a 2-to-24 substitution switching system that provides solid-state L-Band switching for a single set of antenna modulators (up to 24 per antenna). It offers 24 sets of primary inputs and outputs as well as two auxiliary modulator inputs, each one of which can be substituted for any one of the 24 primary inputs. Control and status is provided either locally via the front panel keypad or remotely through a serial or Ethernet interface. Each of the primary modulator paths through the switch have guaranteed "zero-loss" whereas the auxiliary modulator (substitution) path has an additional 3.5 dB gain to compensate for the external power divider loss. Any non-selected paths are internally terminated into 50 ohms.

#### Specifications:

	<u>Primary Path</u>	<u>Auxiliary Path</u>
<b>Operating Frequency:</b>	950-1750 MHz	950-1750 MHz
<b>Impedance:</b>	50 Ω	50 Ω
<b>Flatness:</b>	± 0.5 dB (over any 250 MHz)	± 0.5 dB (over any 40 MHz)
<b>Insertion Loss:</b>	+2.0 dB ± 1.0 dB	+6.0 dB ± 1.3 dB
<b>Isolation:</b>	>40 dB (47 dB typical)	>40 dB (47 dB typical)
<b>Return Loss (I/O):</b>	16 dB	15 dB
<b>Compression (1 dB):</b>	+ 5 dBm	+ 5 dBm
<b>Noise Figure:</b>	9 dB	9 dB
<b>Group Delay:</b>	< 1 nsec.	< 1 nsec.
<b>RF Connectors:</b>	Type "N" (female), 50 Ω	Type "N" (female), 50 Ω
<b>Power Requirements:</b>	100-240 V~ autoranging, 47-63 Hz, w GND lug Dual Redundant Power Supplies	
<b>Power Consumption:</b>	65 W	
<b>Monitor and Control:</b>	Ethernet and RS-422	
<b>Ambient Temperature:</b>	0 to +55° C	
<b>Mechanical:</b>	5 RU (8.75"H x 19"W x 20"D)	
<b>Weight:</b>	28 lbs. gross (boxed), 20.5 lbs. net	

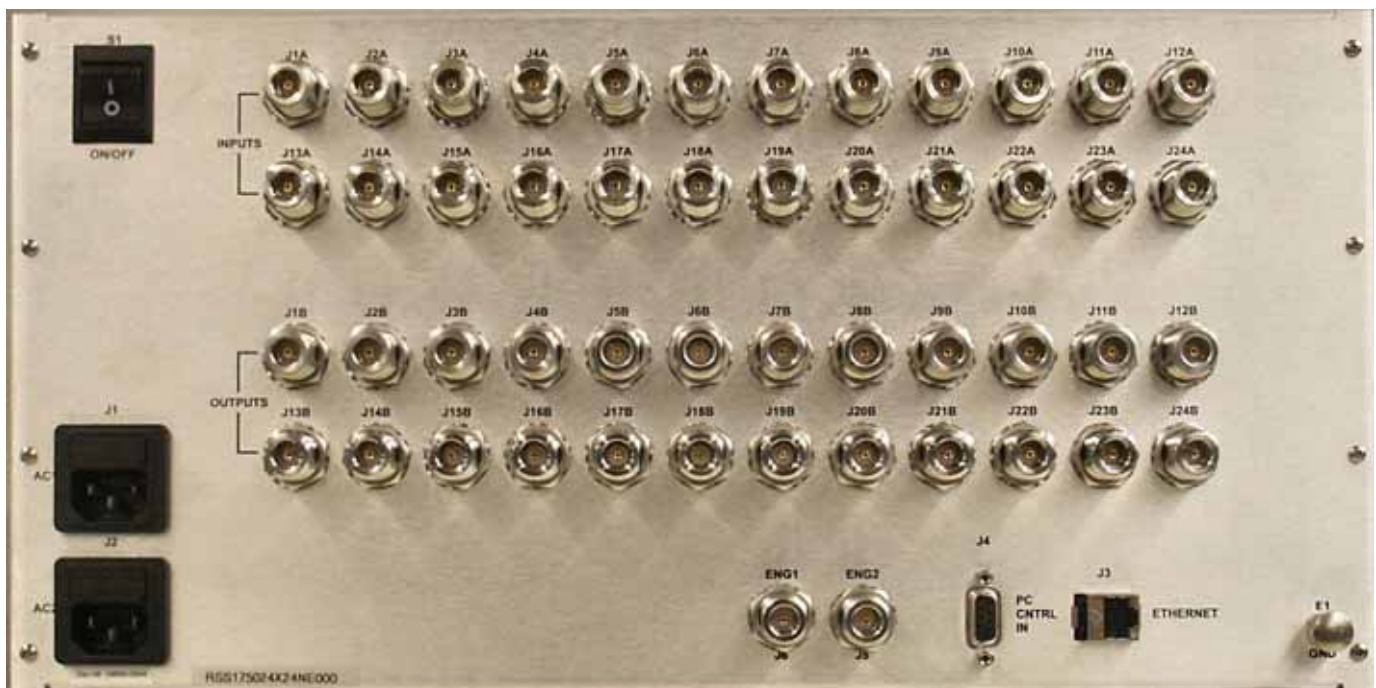

250 Airport Road • Indiana, PA 15701 • (800) 839-3658 • (724) 349-1412 • Fax: (724) 349-1421


<http://www.quitechelectronics.com/> • [info@quitechelectronics.com](mailto:info@quitechelectronics.com)

## Special Instructions:


The RSS175024X24NE000 is equipped with 24 primary inputs and 24 primary outputs. It is also been equipped with two auxiliary inputs: ENG1 and ENG2. By default, each of the inputs (J1A thru J24A) are connected to their corresponding numbered output (J1B thru J24B); for example, input J1A is connected to output J1B, input J2A is connected to output J2B, etc. At any time, each one of the auxiliary inputs (ENG1 or ENG 2) can be routed to one, and only one, of the primary outputs, thus overriding the connection between that output and its corresponding primary input. Since there are only two auxiliary inputs, it is only possible for only two overriding (or substitution) connections to be in effect at any one time. Should the connection between an auxiliary input (ENG1 or ENG2) and a primary output be removed, the output port will revert to being connected to its corresponding primary input port.

### Monitoring and Changing a Connection

To monitor or change a connection, press option 1 "Monitor and Control" from the Main Menu.

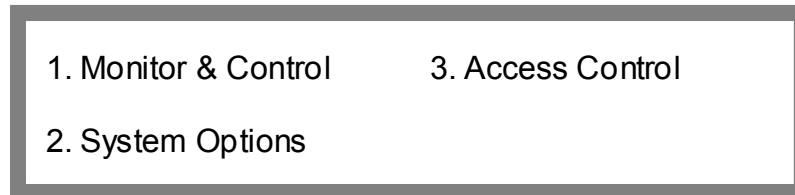


The Connection Status Screen will be displayed.

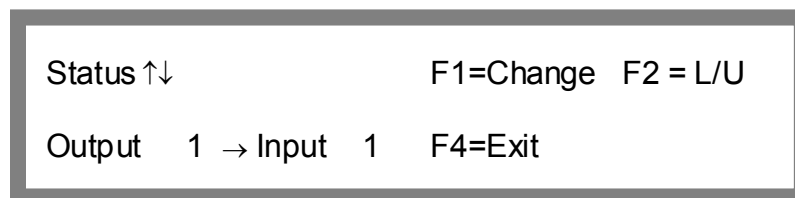

To view the status of a particular output channel, type in the output number or use the scroll keys to scroll up or down respectively. When a valid output channel is entered, the channel input will be displayed approximately two seconds after the last digit is entered.

To change a connection, press F1 from the **Connection Status Screen**. The menu heading will change from "Status" to "Change" and the cursor will move to the right side of the display just after "Input". Select the new input by either typing it in or scrolling through the available inputs with the arrow keys. Press F1 to enter the change. No connection will be made until you press F1. To exit back to the main menu without making changes, press F4.

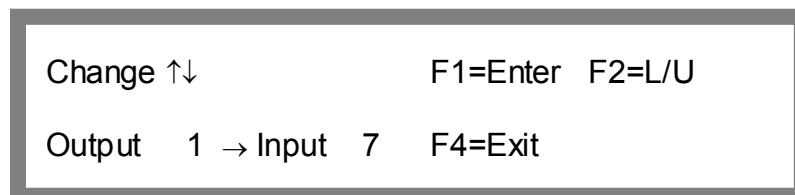


To protect against accidental crosspoint connection change, a lock/unlock feature has been included. Pressing F2 while the **Connection Status Screen** is displayed locks/unlocks the connection status of the currently displayed output. The F2 button operates as a toggle. Pressing it once will lock the connection as currently specified. Pressing it again disables the lock, thereby allowing changes to be made. The F1 button will have no effect upon the output's connection status while the lock is enabled. When an output's connection status is locked, the word "Locked" will appear to the right of the "Status" label. This connection must be unlocked before any changes to the connection can be made.

**IMPORTANT! If an output port has been connected to one of the auxiliary input ports (i.e., ENG1 or ENG2), that connection cannot be protected using the lock/unlock feature. Once the output port is reconnected to its normal corresponding input port, the lock/unlock feature will be re-enabled for that connection.**

## Renaming the Input/Output Ports


Functionality has been included to allow names to be assigned to each of the input ports, output ports, and auxiliary input ports. To rename any input port or output port, choose "Set Input Names" or "Set Output Names" in the **I/O Names Screen**. To get to the **I/O Names Screen** from the main menu, perform the following key/menu sequence:

2. System Options
  1. Configuration (enter "732" as the code, when prompted)
    1. System Setup
    4. I/O Names

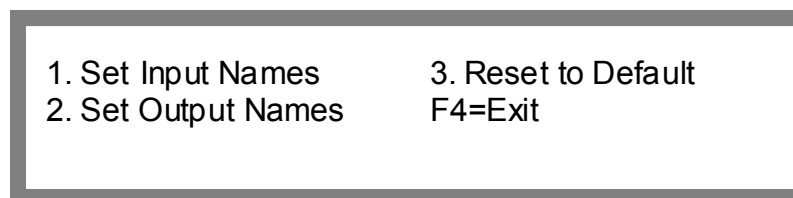

### I/O Names Screen


Choose whether to assign a name to an input port or an output port by pressing either "1" or "2" on the keypad. Depending on your selection, either the **Input Name Screen** or the **Output Name Screen** will be displayed. If you wish the input port names and output port names to be reset to their factory-default values, press "3". Pressing F4 will return you to the **I/O Names Screen**.

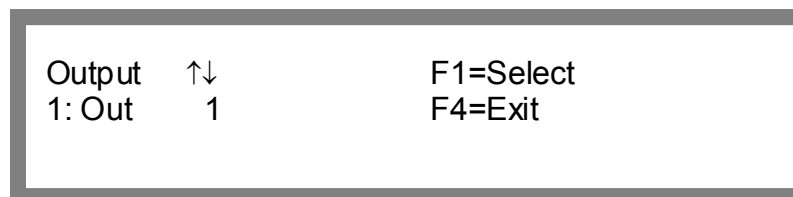

### Output Name Screen

In the Input Name Screen or Output Name Screen, the port number is shown followed by the current name assigned to that port. You can use the scroll keys to scroll through the available port numbers.


Use the up and down arrow keys to select the port number whose name you wish to specify. As a default, all input ports are named "In n" and all output ports are named "Out n", where "n" is the number of the input or output port. Once the correct port is selected, press F1 to enter the **Change Port Name Screen**.

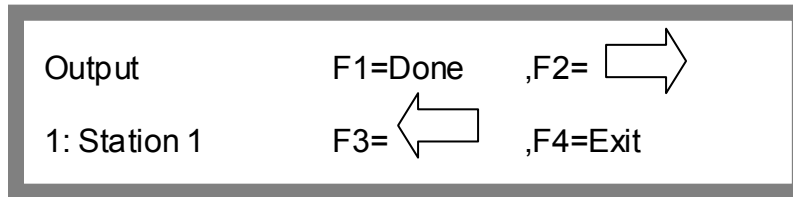

### Change Port Name Screen

Use the F2 and F3 keys to position the cursor at a particular character position, then use the up and down arrow keys to scroll through a list of alphanumeric characters. Repeat this process as often as necessary until the desired name has been entered, then press F1 to save it and return to the **Input Name Screen** or the **Output Name Screen**. Pressing F4 will exit without making any name changes.

**IMPORTANT! A port name can be comprised of 7 characters maximum (A-Z, a-z, 0-9, and space).**

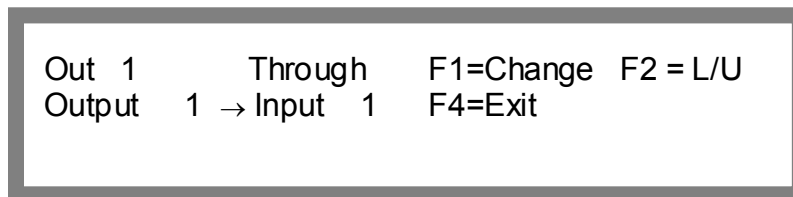

Once the port has been assigned a name, that name will appear on the **Connection Status Screen**.